




Operating instructions Electronic pressure sensor for industrial applications

PT24xx

UK

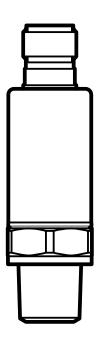

Contents

1	Preliminary note	2
2	Safety instructions	2
	Functions and features	
4	Functions	4
5	Installation	5
6	Electrical connection	5

1 Preliminary note

Symbols used

- Instructions
- → Cross-reference
- Important note

Non-compliance can result in malfunction or interference.

Information
Supplementary note.

2 Safety instructions

- The device described is a subcomponent for integration into a system.
 - The manufacturer of the system is responsible for the safety of the system.
 - The system manufacturer undertakes to perform a risk assessment and to create a documentation in accordance with legal and normative requirements to be provided to the operator and user of the system. This documentation must contain all necessary information and safety instructions for the operator, the user and, if applicable, for any service personnel authorised by the manufacturer of the system.
- Read this document before setting up the product and keep it during the entire service life.

- The product must be suitable for the corresponding applications and environmental conditions without any restrictions.
- Only use the product for its intended purpose (\rightarrow Functions and features).
- Only use the product for permissible media (\rightarrow Technical data).
- If the operating instructions or the technical data are not adhered to, personal injury and/or damage to property may occur.
- The manufacturer assumes no liability or warranty for any consequences caused by tampering with the product or incorrect use by the operator.
- Installation, electrical connection, set-up, operation and maintenance of the unit UK must be carried out by qualified personnel authorised by the machine operator.
- Protect units and cables against damage.

3 Functions and features

The pressure sensor detects the system pressure and converts it into an analogue output signal.

3.1 Applications

Type of pressure: relative pressure


Order number	Measuring range	Static pressure resistance (max. permissible pressure)	Bursting pressure
	psi	psi	psi
PT2415	0100	250	2900
PT2424	0200	580	6525
PT2494	-14,5200	580	6525
PT2434	0300	940	8700
PT2443	0500	1450	11600
PT2402	01000	2500	13050
PT2432	03000	7250	14500
PT2400	05000	14500	24650

Pressure Equipment Directive (PED):

The units comply with the Pressure Equipment Directive and are designed and manufactured for group 2 fluids in accordance with the sound engineering practice. Use of group 1 fluids on request!

- Avoid overload pressure exceeding the specified maximum permissible pressure by taking appropriate measures.
 - The indicated bursting pressure must not be exceeded.
 - Even if the bursting pressure is exceeded only for a short time, the unit may be destroyed. ATTENTION: Risk of injury!
- If the cable length exceeds 30 m or if used outside buildings, there is a risk of overvoltage pulses from external sources. We recommend to use the unit in protected operating environments and to limit overvoltage pulses to max. 500 V.
- The units are vacuum resistant.

4 Functions

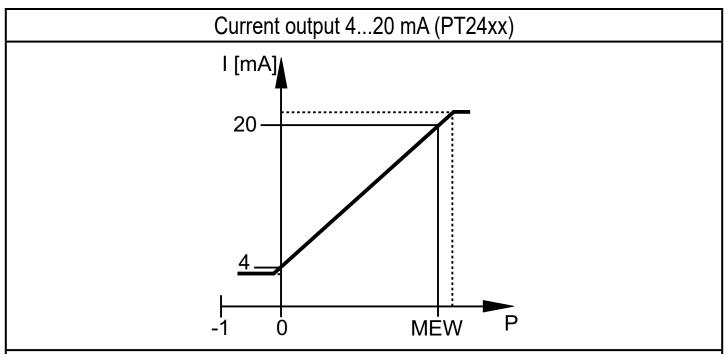

- P = system pressure, MEW = final value of the measuring range
- In the measuring range the output signal is between 4 and 20 mA. If the system pressure is above or below the measuring range, the analogue output behaves, without achieving the accuracy, as follows:
- System pressure above the measuring range: 20...25 mA.
- System pressure below the measuring range: 4...3 mA.

5 Installation

- Before installing and removing the unit: make sure that no pressure is applied to the system.
- ► Insert the unit in a ½-18 NPT process connection.
- ► Tighten firmly. Recommended tightening torque: max. 50 Nm. Depends on lubrication, seal and pressure load!

6 Electrical connection


The unit must be connected by a qualified electrician.

The national and international regulations for the installation of electrical equipment must be adhered to.

Voltage supply to EN 50178, SELV, PELV.

- For marine applications (if approval available for the device), additional surge protection is required.
- ▶ Disconnect power.
- ► Connect the unit as follows:

PT24xx (4...20 mA analogue)

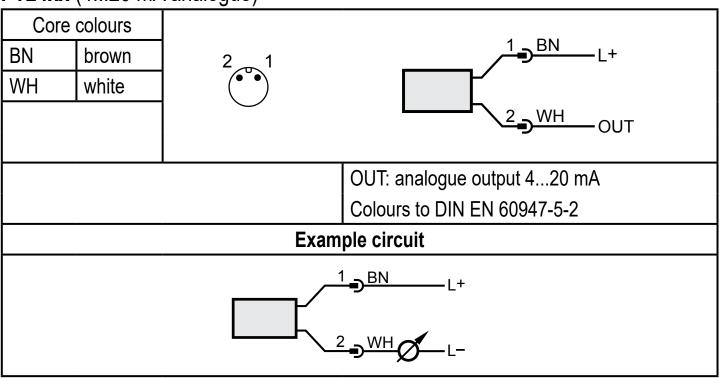

More information at www.ifm.com